



**Note 1**  
 Twist the Red and Black wires together  
 Connect the Red Power Wire to the heavy battery wire at the starter motor solenoid  
 Connect the Black Wire to the Engine Block near the starter motor

**Note 2**  
 The function for PWM Output 1 must be set to Ignition

**Note 3**  
 Alternatively PWM Output 2 may be used (Pin 21)

<b>Setup</b>	ign	2
	COIL	1
	dELL	0