
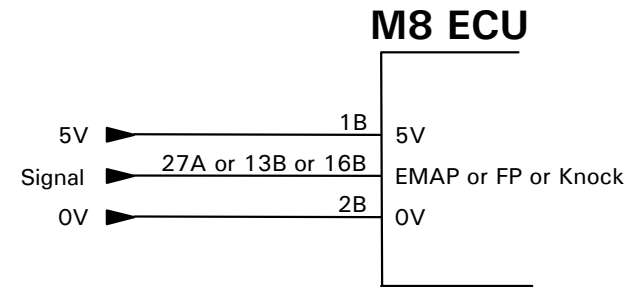
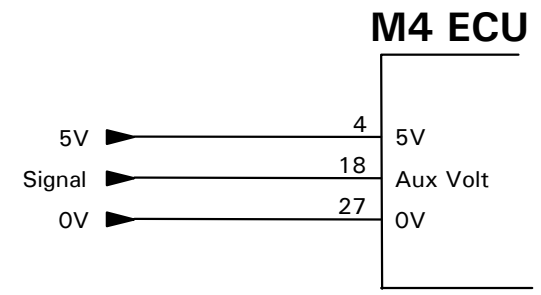


Mounting Orientation

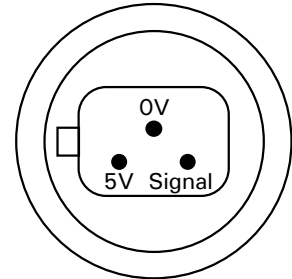

ECU Setup

Sensor Calibration
Select 1 Volt per G

G Sensor Zero
Zero the Lateral and Logitudinal sensors with vehicle on a level surface