


Refer to the Trigger Drawings for details


### Sensors

### ECU

**Injectors** Connect in firing order for sequential operation

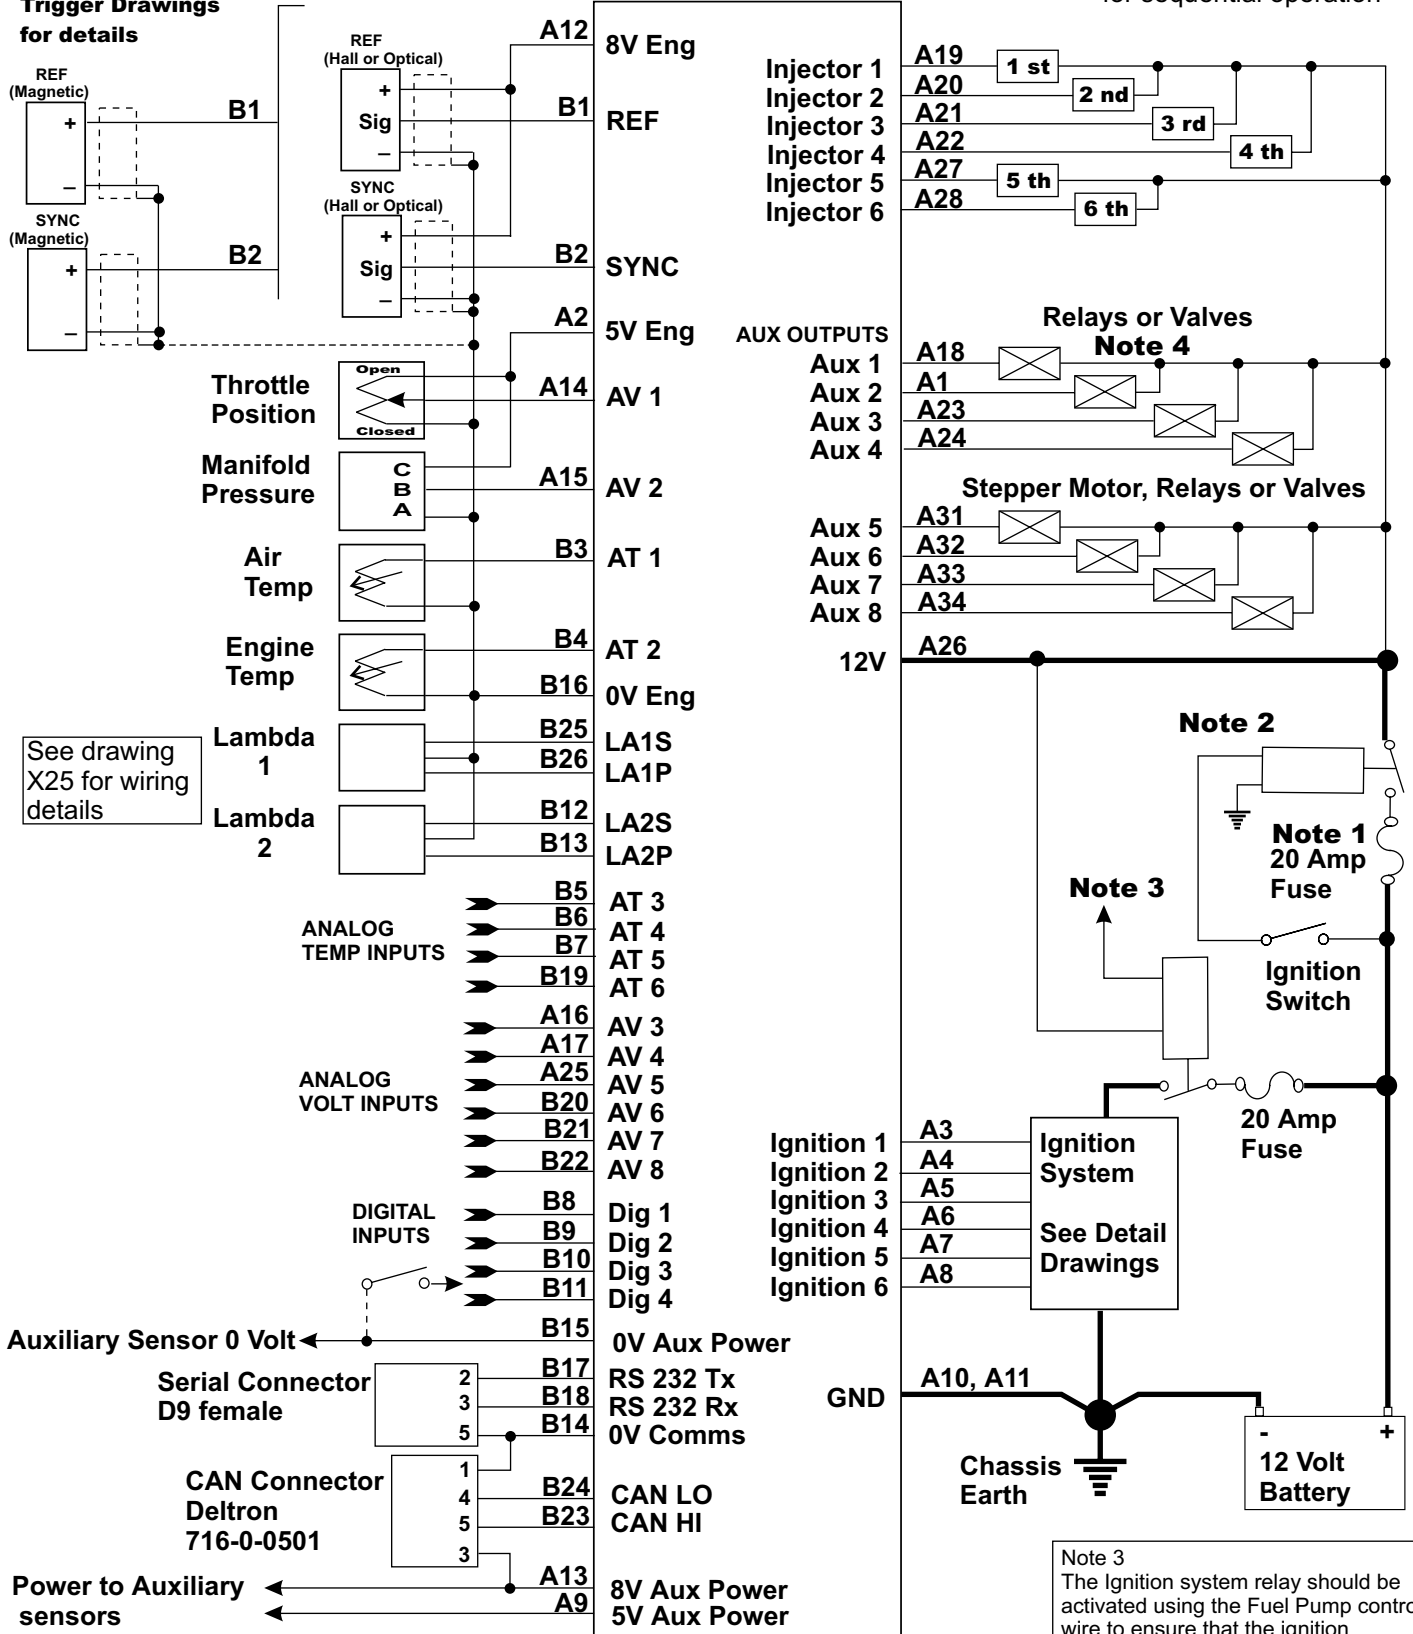

### Looking into Connector on ECU

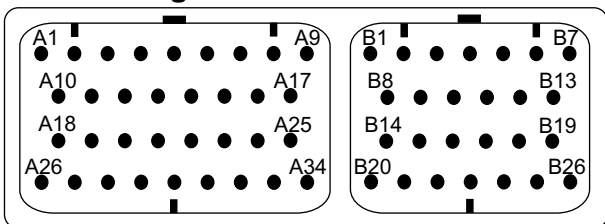

**Note 1**  
The Fuse is essential to ensure that the ECU is not damaged by reversed battery polarity

**Note 2**  
To avoid the fuse blowing due to reverse battery polarity use a diode activated relay eg. Bosch 0332 014 112

**Note 3**  
The Ignition system relay should be activated using the Fuel Pump control wire to ensure that the ignition system is off when the engine is stopped. Or use the Fuel Pump Relay to power the Ignition System. This also provides reverse battery protection to the ignition system.

**Note 4**  
Aux 1,2, 5-8 can also drive grounded loads. Aux 1 and 2 are High current.