


### Flow Meter

Battery +

### M4 - ECU

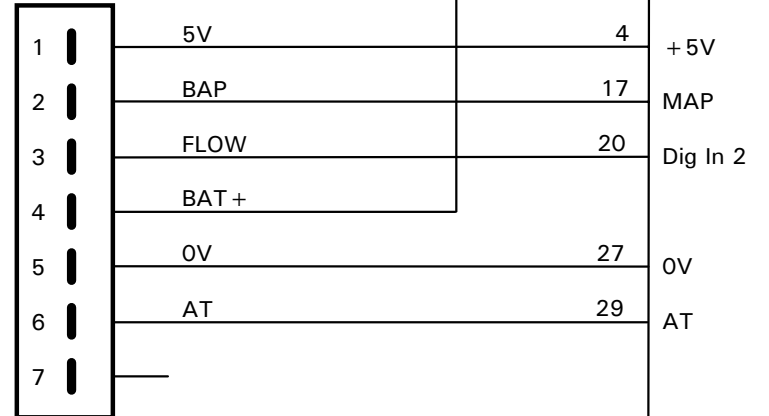

<b>Software Version</b>	<b>V3.8 or higher</b>
-------------------------	-----------------------

**Note**  
 The BAP sensor calibration is not known  
 Use the MAP User Calibration table to calibrate the sensor based on the atmospheric pressure

**Note**  
 Use the standard Fuel vs MAP correction curve  
 (Double pressure double fuel)

	Engine Type	VR4 III			
<b>Main Setup</b>	EFF	7			
	LOAD	7			
	Ld S	100			

	Engine Type	VR4 III			
<b>Input / Output Functions</b> <b>Dig In 2</b>	Function	1			
	Units	1			
	Calibration	2527			
	Sample Teeth	1			

Flow : gm / sec

Eff and Load Axis : mg / cylinder / cycle